




Kitchen

Dishwasher
Cooktop
Convection oven
Garbage

Dishwasher

1. Before turning on the dishwasher, make sure that the water intake valve on the kitchen faucet is open. Normally, the valve is in the open position. If the water supply is blocked, the dishwasher will sound an error.
2. You can find a supply of dishwasher tablets below the sink. Use one tablet for each load of dishes. Put the tablet into a special compartment on the inside of the door and close the lid.
3. Do not use dishwashing liquid for the dishwasher.
4. Place the dishes so that they do not block the moving part of the dishwasher.
5. To turn the dishwasher on, press the power button on the top of the door. Use the other button to select the appropriate washing mode. The machine will start working as soon as you close the door.
6. To add or remove the dishes from the working machine, open the door a crack, wait until the washer stops working (the characteristic sound will cease) and open the door all the way.

Cooktop

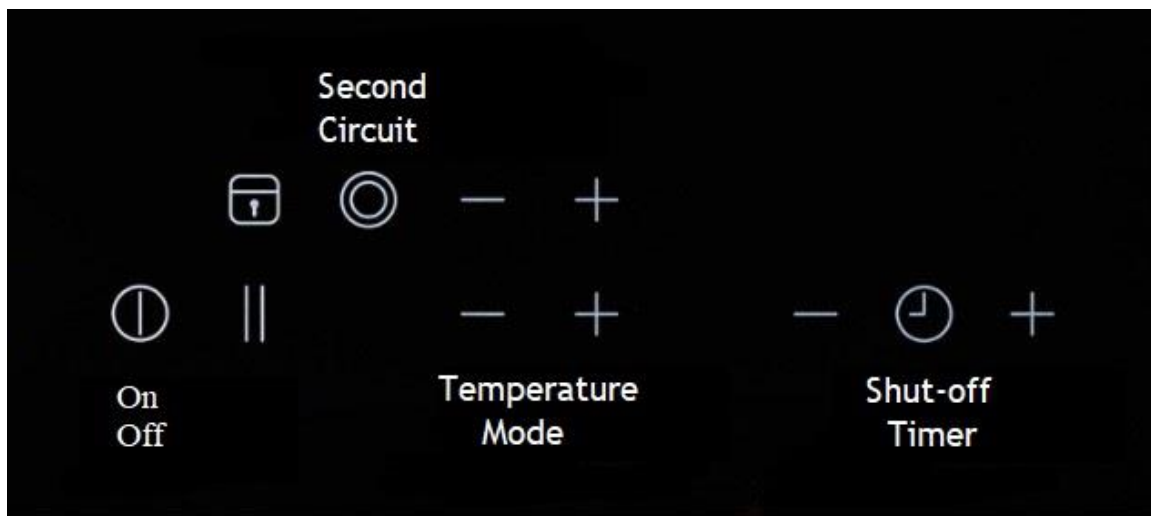

1. Press and hold the On/Off button to turn the cooktop on/off.
2. Press + and - to select the temperature mode.
3. Use the Second Circuit button to expand the heating area of the back burner.
4. Use the Shut-off Timer button to set the shut-off time for each burner.
5. By pressing the lock icon for 4 seconds, the child safety lock is temporarily activated and the cleaning function allows you to clean the surface without changing the settings.
6. The Pause button allows you to interrupt the cooking process and start it again, if necessary, while maintaining the temperature. This function automatically sets the temperature maintenance mode.
7. When boiling and pouring of some contents onto the control panel or when cookware is placed incorrectly, the cooktop automatically turns off. To start the cooktop, press the On/Off button.

Convection oven

1. The oven door is equipped with a child-proof lock to ensure the children's safety. To open the door, turn the lock up and pull the door open.
2. Use the regulator on the right to choose the heating mode:
 - a. Top + bottom heating elements provide ideal conditions for slow baking and cooking with a crust.
 - b. Top heating element ensures a crisp crust and allows the top layer of the dish to bake thoroughly. It is used for making casseroles and desserts.
 - c. Bottom heating element can be used at the end of the cooking process to create the bottom crust. It is ideal for cooking pies and pizzas.
3. Set the temperature with the regulator on the left, and change it during cooking, if necessary.
4. If the walls or bottom of the oven get splashed during the cooking, clean them with special detergents you will find in the pantry near the entrance to the cottage.

Attention! Be careful when opening the hot oven door - do not bend down or peek into it. Hot air under pressure may burn the face.

Garbage

ONNI Village is located in a protected area. For this reason, garbage trucks are only allowed to pick up rubbish from centralized collection points, so everyone living on the peninsula has to take care of their garbage individually.

Please transport your garbage to the nearest collection point.

In Finland, it is customary to sort garbage for further processing.

Garbage is sorted into:

1. Metal
2. Glass
3. Cardboard
4. Paper/newspapers
5. Household waste: various plastics and packaging materials, broken dishes and glass, cigarette butts, ash, rubber, leather, textiles, diapers and hygiene products, food waste.

Sorted waste collection points:

1. 23 km - Puumalantie 2027, Syyspohja. GPS: 61.399076, 28.625887
2. 33 km - Puumalantie 967, Virmutjoki. GPS: 61.343674, 28.770185

If you have decided not to sort the garbage, there is a household waste collection point 5 km from ONNI Village, at Kietäväläntie 573, GPS: 61.337534, 28.347822 on the right in the direction of the traffic.

Glass and plastic bottles or beverage tin cans purchased in the EU (not in the Duty Free zone) can be delivered to reception points at large stores (Lidl, Prisma, K-Citymarket), where they may be exchanged for cheques with which you may purchase goods.